

INSTRUCTIONS FOR COMBO ROOF RAKE ASSEMBLY

ASSEMBLY INFORMATION:

- · Check parts against parts list.
- Read instructions completely before starting assembly.

SNOW RAKE ASSEMBLY INSTRUCTIONS:

STEP 1: Insert Snow Rake angled tube (A) between top edge and tab on blade (B). Align holes, secure with bolt (C) lock nut (D).

STEP 2: Align slot of roller (K) at blade (B) edge and push roller onto blade until roller rotates. Repeat other side.

NOTE: PLACING ROLLERS IN HOT WATER FOR 5
MINUTES WILL MAKE INSTALLATION FASIER.

STEP 3: Attach FLAT end of brace (E) to blade (B) by aligning holes and securing with bolt (F) and lock nut (D). Repeat for other side.

STEP 4: Attach CURVED end of braces (E) to angled tube (A) by aligning holes and secure in place with bolt (C) and lock nut (D).

STEP 5: Squeeze legs of snap button (J) together and insert into the swaged end of the extension tube (H). Repeat operation for other extension tubes.

STEP 6: Slip poly grip (G) on the end of one extension tube (H). NOTE: Grip will go on easier by heating in warm water.

STEP 7: To assemble rake for use, depress snap button (J) on pole, insert extension tube into angled tube end so snap button pops through hole. Repeat with extension tubes (H) until complete.

SNOW RAKE AND POLE PARTS LIST				
Ref. Letter	Part No.	Description	Qty.	
Α	61.002	Angled Tube (Snow Rake)	1	
В	61.008	Blade	1	
С	03.080	1/4-20 x 1-1/2" Bolt	2	
D	03.862	1/4-20 Locknut	4	
Е	61.004	Brace	2	
F	03.861	1/4-20 x 1/2" Bolt	2	
G	06.605	1" Poly Grip	1	
Н	61.003	Extension Tube	4	
J	03.232	Snap Button	4	
K	06.291	Rollers	2	

LEAF BRUSH ASSEMBLY INSTRUCTIONS:


STEP 1: Insert angled tube end (N) through brush (M). Align bolt holes, insert bolt (O) through bottom side of brush between bristles, and secure in place with lock nut (D).


STEP 2: Attach FLAT end of brace (E) to brush (M) by aligning holes and securing in place with a $\frac{1}{2}$ -20 x 1- $\frac{1}{2}$ bolt (C), $\frac{1}{4}$ washer (L), and a $\frac{1}{4}$ -20 lock nut (D). Repeat for other side.

STEP 3: Attach CURVED end of braces (E) to angled tube (N) by aligning holes and secure in place with bolt (C) and lock nut (D).

STEP 4: Depress snap button and remove Snow Rake (if attached). Then depress snap button and slide Brush Assembly onto poles.

LEAF BRUSH PARTS LIST				
Ref. Letter	Part No.	Description	Qty.	
С	03.080	1/4-20 x 1-1/2" Bolt	3	
D	03.862	1/4-20 Lock Nut	4	
Е	61.004	Brace	2	
L	03.879	1/4" Washer	2	
М	49.921	Brush	1	
N	61.011	Angled Tube (Brush Assy)	1	
0	03.880	1/4-20 x 2" Bolt	1	





SARELICI


644 2nd Street, P.O. Box 8 St. Paul Park, Minnesota 55071 Phone: 651-459-9795 E-mail: mail@garelick.com Website: www.garelick.com

Rev F 7/14





INSTRUCTIONS FOR COMBO ROOF RAKE ASSEMBLY

SNOW RAKE AND POLES ASSEMBLY

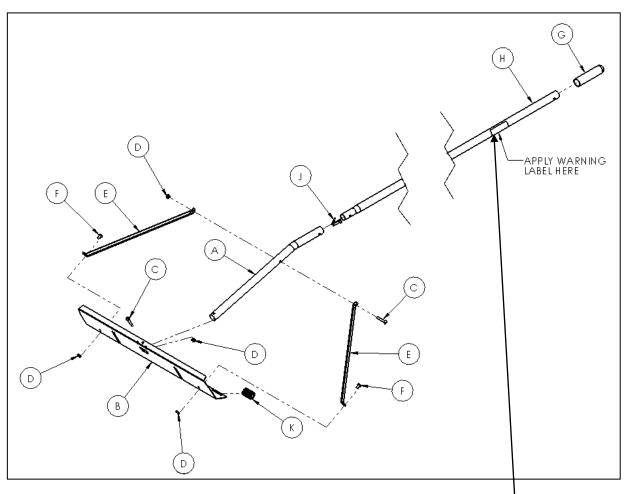

BRUSH ASSEMBLY

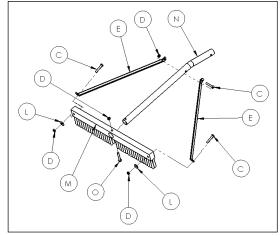



FERELICIX 644 2nd Street, P.O. Box 8 St. Paul Park, Minnesota 55071 Phone: 651-459-9795 E-mail: mail@garelick.com Website: www.garelick.com

Rev F 7/14